	Component Maintenance Manual	Document Number 122-036-00	Revision 1
		Date 01/03/23	Page 1 of 24


Component Maintenance Manual, Cargo Hook

Onboard Systems International, LLC
13915 NW 3rd Court
Vancouver, WA 98685 United States of America
Cage Code: 1Y921

Toll Free Phone: (800) 275-0883
Phone: (360) 546-3072
Fax: (360) 546-3073

Applicable Equipment Part Numbers
528-049-00
528-049-01

***Please check our web site www.onboardsystems.com
for the latest revision of this manual.***

	Component Maintenance Manual	Document Number 122-036-00	Revision 1
		Date 01/03/23	Page 2 of 24


RECORD OF REVISIONS

Revision	Date	Page(s)	Reason for Revision
0	03/31/22	All	Initial Release
1	01/03/23	8, 13, 14, 15, 22	Add cleaning and inspection instructions for cam surfaces. Add cam assembly to overhaul kit.

Register Your Products for Automatic Notifications

Onboard Systems offers a free notification service via fax or email for product alerts and documentation updates. By registering your Onboard Systems products at our website, we will be able to contact you if a service bulletin is issued, or if the documentation is updated.

You can choose to receive notices on an immediate, weekly, or monthly schedule via fax, email or both methods. There is no charge for this service. Please visit our website at www.onboardsystems.com/notify.php to get started.

	Component Maintenance Manual	Document Number 122-036-00	Revision 1
		Date 01/03/23	Page 3 of 24

1.0 Introduction

- 1.1 **Scope.** This component maintenance manual contains instructions for inspection, maintenance and overhaul.
- 1.2 **Capability.** The instructions contained in this document are provided for the benefit of experienced aircraft maintenance personnel and facilities that are capable of carrying out the procedures.
- 1.3 **Safety Labels.** The following definitions apply to safety labels used in this manual.



Indicates a hazardous situation which, if not avoided, will result in death or serious injury.



Indicates a hazardous situation which, if not avoided, could result in death or serious injury.




Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.



Draws the reader's attention to important or unusual information not directly related to safety.



Used to address practices not related to personal injury.


	Component Maintenance Manual	Document Number 122-036-00	Revision 1
		Date 01/03/23	Page 4 of 24

2.0 Referenced Documents

180-264-00 Acceptance Test Procedure

3.0 Service Bulletins/Amendments

3.1 This cargo hook is not subject to any service bulletins or amendments.

	Component Maintenance Manual	Document Number 122-036-00	Revision 1
		Date 01/03/23	Page 5 of 24

4.0 Maintenance

- 4.1 Maintain a record of ALL cargo hook activities including aircraft installation and removal, inspections, repair and overhaul as well as inactivity and storage events.



Failure to follow all equipment maintenance instructions and component inspection criteria may result in serious injury, death or immediate loss of flight safety.

4.2 Monthly Preventative Maintenance


1. Remove accumulated soils, as necessary, from the exterior of the cargo hook with a soft bristle brush and mild solvent/cleaner
2. In salt water environments, apply a corrosion preventative compound such as ACF-50 to all exterior surfaces.

4.3 Annual Inspection

1. Annually or 100 hours of external load operations, whichever comes first, clean the exterior of the cargo hook with a soft bristle brush and mild solvent/cleaner and visually inspect for cracks, gouges, dents, nicks, corrosion, and missing or loose fasteners.

4.4 Overhaul

1. Overhaul the Cargo Hook in accordance with the overhaul schedule and instructions contained here-in.


	Component Maintenance Manual	Document Number 122-036-00	Revision 1
		Date 01/03/23	Page 6 of 24

4.5 **Storage and Inactivity**

1. The cargo hook may be stored in its original factory sealed bag and box for up to 2 years from its date of manufacture or last factory overhaul. If stored in its original factory sealed bag and box for less than 2 years, it may be used without any additional activity. If the period of storage in its original packaging is greater than 2 years the cargo hook must be subjected to a functional check, perform the functional check per the instructions in sections 10.7 through 10.9 of the acceptance test procedures (ATP) described herein before being used.
2. If the cargo hook has been installed on an aircraft and subsequently removed from service, store it in a reasonably protected indoor, dry, heated storage area for up to 6 months. If stored in this condition for less than 6 months, it may be used without any additional activity. If it is to be stored longer than 6 months perform the following activities. Prepare the cargo hook for storage by thoroughly cleaning and drying the exterior, liberally applying ACF-50 corrosion preventative compound inside and out, sealing it in a plastic bag with a desiccant, and labeling it with the date of storage. If stored in this condition for less than 2 years, it may be placed in service without any additional activity. If the period of storage exceeds 2 years the cargo hook must be subjected to the ATP described herein before being placed in service.
3. If the cargo hook has been installed on the aircraft and subsequently removed from service but not stored in accordance with the instructions above, the cargo hook must be subject to the ATP described herein before being placed in service.

4.6 **Repair**

1. Repair the Cargo Hook in accordance with the repair instructions contained here-in.


	Component Maintenance Manual	Document Number 122-036-00	Revision 1
		Date 01/03/23	Page 7 of 24

5.0 Repair Instructions

- 5.1 It is recommended that only minor repairs be attempted by anyone other than the factory. The following procedures and information are provided for the benefit of experienced aircraft maintenance facilities capable of carrying out the procedures. They must not be attempted by those lacking the necessary expertise and suitable equipment to acceptance test the cargo hook after maintenance. See Section 14 for instructions for returning equipment to the factory.
- 5.2 Reference numbers throughout this manual shown in parentheses () refer to Table and Figure 13.1.
- 5.3 Follow these steps to repair the Cargo Hook, referring to the applicable sections in this manual:
1. Disassemble as required.
 2. Inspect disassembled parts.
 3. Obtain required replacement parts.
 4. Re-assemble.
 5. Acceptance test.
 6. Inspect for return to service.


6.0 Overhaul Schedule

- 6.1 The Cargo Hook shall be overhauled every 1000 hours of external load operations or 5 years, whichever comes first.
- 6.2 Hours of external load operations should be interpreted to be (1) anything is attached to the primary cargo hook (whether or not a useful load is being transported) and (2) the aircraft is flying. If these conditions are not met, time does not need to be tracked.
- 6.3 The 5 year period is from the initial installation date when the cargo hook is new or newly overhauled, regardless of storage or inactivity periods. If initial installation date is unknown, then 5 year period is from date of manufacture as indicated on the cargo hook data plate or 5 years from date of last overhaul indicated on the overhaul sticker.

	Component Maintenance Manual	Document Number 122-036-00	Revision 1
		Date 01/03/23	Page 8 of 24


7.0 Overhaul Instructions

- 7.1 It is recommended that only minor repairs be attempted by anyone other than the factory. The following procedures and information are provided for the benefit of experienced aircraft maintenance facilities capable of carrying out the procedures. They must not be attempted by those lacking the necessary expertise and suitable equipment to acceptance test the cargo hook after maintenance. See Section 14 for instructions for returning equipment to the factory.
- 7.2 An Overhaul Kit is available that contains all parts required to complete an overhaul as well as additional parts typically replaced at overhaul. Overhaul kit P/N 212-032-00 detail parts are listed in Table 13.1.
- 7.3 Follow these steps to overhaul the Cargo Hook, referring to the applicable sections in this manual:
1. Completely disassemble.
 2. Discard all items that are to be replaced by an item in Overhaul Kit P/N 212-032-00 listed in Table 13.1 (cam assembly, springs, bearings, roll pins, cotter pins, fasteners, nuts and washers).
 3. Inspect disassembled parts.
 4. Obtain required replacement parts.
 5. Reassemble.
 6. Acceptance test.
 7. Inspect for return to service.

	Component Maintenance Manual	Document Number 122-036-00	Revision 1
		Date 01/03/23	Page 9 of 24

8.0 Disassembly Instructions

- 8.1 Remove Manual Release Cover (11) by removing two screws (23).
- 8.2 Remove cotter pins (17, 18).
- 8.3 Remove Solenoid Assembly (5) by removing nuts (16, 20), and washers (15, 19) from bolts (10, 21).
- 8.4 Remove nut (16), and Armor Plate (13) from bolt (22).
- 8.5 Remove Armor Plate (12).
- 8.6 Remove nut (14) and washer (24 securing Manual Release Lever Assembly (4).
- 8.7 Remove Manual Release Lever Assembly and springs (27).
- 8.8 The housing can now be separated by lifting the Side Plate (7) from the assembly. The internal mechanism can now be viewed and cycled to check for smooth operation by temporarily re-inserting the bolt (10) through the Toggle pivot. All of the internal parts may be removed at this time.
- 8.9 The solenoid (5.2) may be separated from the Solenoid Cover (5.1) by removing two nuts (5.5) and unsoldering its wires from the connector.
- 8.10 The connector may be removed by cutting the safety wire and removing its nut on the outside of the cover. Note the connector orientation before removing.
- 8.11 Note the orientation of Solenoid Cam (5.3) and remove three screws (5.4).
- 8.12 Bushings/bearings may be removed from detail parts by conventional means.
- 8.13 Do not typically disassemble the Load Beam (1.1) from the Load Beam Shaft (1.2).

	Component Maintenance Manual	Document Number 122-036-00	Revision 1
		Date 01/03/23	Page 10 of 24

9.0 Inspection Instructions

- 9.1 Thoroughly clean all parts to be inspected using standard methods. Parts should be completely free of surface contaminants, soils or grease before beginning inspections.
- 9.2 If the Cargo Hook is being overhauled, firstly perform nondestructive inspection on the following parts to confirm absence of surface cracks which may have developed in service. Confirmed cracks of any size are cause for part replacement.

For the **Side Plate, Solenoid (6.1)** and **Side Plate, Manual Release (7.1)**, inspect using:

- Liquid penetrant inspection per ASTM E1417

Mark all indications and then interpret each under 10X magnification. Differentiate surface cracks from other non-relevant indications such as machine tool marks, scratches, dents or superficial corrosion.

- 9.3 Carefully inspect detail parts in accordance with the instructions in Table 9.1. Inspect the parts in a clean, well lighted room using standard dimensional measuring tools and visual methods. Repair parts found within inspection limits. Replace any part found beyond limits.

Table 9.1, Cargo Hook Inspection Criteria

Seq	Component	Inspection Criteria & Limit	Repair Action	Finish
1.	Load Beam Assembly (1), Toggle (3.1)	Surface cracks – inspect under illuminated magnification (minimum 2X / 4 diopter).	None. Cracks of any size are cause for part replacement.	N/A
2.	Load Beam Assembly (1), Manual Release Lever (4.1), Solenoid Cam (5.3), Armor Plate (12, 13)	Corrosion – 0.006 in. (0.127 mm) deep	Glass bead blast at less than 30 PSI (2.11 KGF/CM2) to remove corrosion.	Passivate per AMS-QQ-P-35 or ASTM A967
3.	Side Plate (6.1, 7.1)	See figure 9.1	Blend at 10:1 ratio as required to provide smooth transitions.	Apply Alodine (MIL-DTL-5541) and zinc chromate primer (MIL-PRF-23377 or similar) to affected surfaces – see Note 1
4.	Manual Rel. Cover (11) Solenoid Cover (5.1)	Dents, nicks, cracks, gouges, scratches and corrosion – 0.020 in. (0.50 mm) deep	Blend at 10:1 ratio as required to provide smooth transitions.	Apply Alodine (MIL-DTL-5541) and zinc chromate primer (MIL-PRF-23377 or similar) to affected surfaces – see Note 1.
5.	DU Bearing (2.3, 2.4, 3.4, 4.2, 6.2, 7.2)	Wear – more than 50% copper showing	None	N/A
6.	Bearing (3.2)	Roughness, binding, looseness, or corrosion	None	N/A



Component Maintenance Manual

Document Number
122-036-00

Revision
1

Date
01/03/23

Page
11 of 24

Seq	Component	Inspection Criteria & Limit	Repair Action	Finish
7.	Bumper (26)	Denting, cuts or abrasions – 0.060 in. (1.52 mm) deep	None	N/A
8.	Armor Plate (12, 13)	Gouges and nicks – 0.050 in. (1.27 mm) deep	Blend at 10:1 ratio as required to provide smooth transitions.	Passivate per AMS-QQ-P-35 or ASTM A967
9.	Cam Assembly (2)	See Figure 9.2	None	N/A
10.	Cam Assembly (2)	Roughness, binding or looseness of the Interlock Roller (2.2)	Replace Interlock Pin (2.5), Roller (2.2), and DU Bearings (2.3).	N/A
11.	Toggle Assembly (3)	Roughness, binding or looseness of the Load Beam Roller (3.3)	Replace Pin (3.5), Roller (3.3), and DU Bearings (3.4).	N/A
12.	Cam Roller Pin (8)	Visible denting	None.	N/A
13.	Load Beam (1.1)	Wear, gouges and nicks – 0.050 in. (1.27 mm) deep	Blend at 10:1 ratio as required to provide smooth transitions and assure load rings will not hang up on load beam during release.	Passivate per AMS-QQ-P-35 or ASTM A967
14.	Serial number Plate (5.6)	Damaged or illegible	None	N/A
15.	Solenoid (5.2)	Shorted or open electrical circuit. Resistance should be 3.0 to 4.0 ohms across pins.	None	N/A
16.	Electrical connector (5.7)	Loose, missing, or mutilated contact pins, cracked case, or worn insulator	None	N/A
17.	Rigging Warning Decal (28)	Damage or illegible	None	N/A
18.	Springs (2.7, 27)	Cracks or deformation	None	N/A
19.	Electrical wiring	Deterioration	None	N/A

Note 1 – For service at Onboard Systems, optional finish: black anodize per MIL-A-8625 Type II, Class 2 after nondestructive inspection. Prepare for anodize by using standard methods.


	Component Maintenance Manual	Document Number 122-036-00	Revision 1
		Date 01/03/23	Page 12 of 24

Figure 9.1, Side Plate, Additional Inspection Criteria




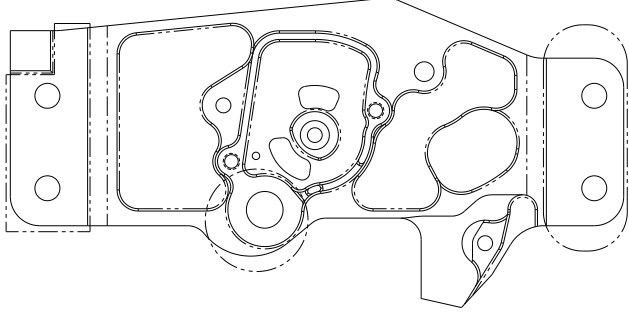
Side Plate, Manual (7.1)	
	
Side Plate, Solenoid (6.1)	
	
<p><u>Inspection Criteria and Limits</u></p> <p>Inside dashed circles – NO corrosion allowed.</p> <p>Inside dashed circles – Dents, nicks, gouges, and scratches – 0.010 in (0.25 mm) deep.</p> <p>Inside dashed rectangle – Dents, nicks, gouges, scratches, and corrosion – 0.010 in (0.25 mm) deep.</p> <p>Outside dashed rectangle – Dents, nicks, gouges, scratches, and corrosion – 0.020 in (0.50 mm) deep.</p> <p>(X) Approved metal stamp locations</p>	

Figure 9.2 Cam Assembly (2) Inspection Criteria

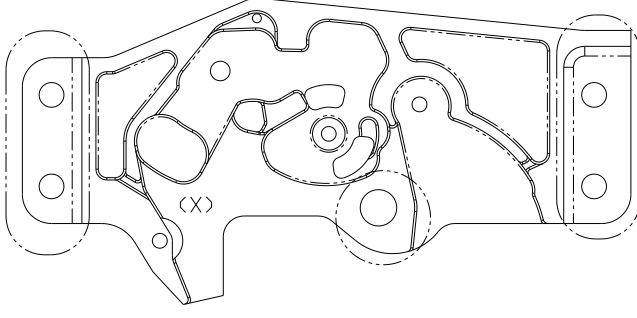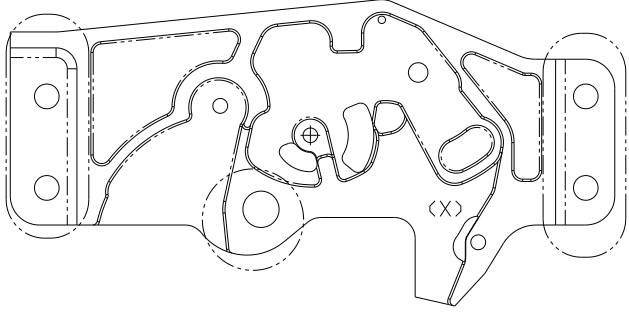

Thoroughly inspect surfaces inside lines for signs of visible wear, dents, corrosion, gouges or nicks. Continued use of a damaged cam may cause inadvertent load release.

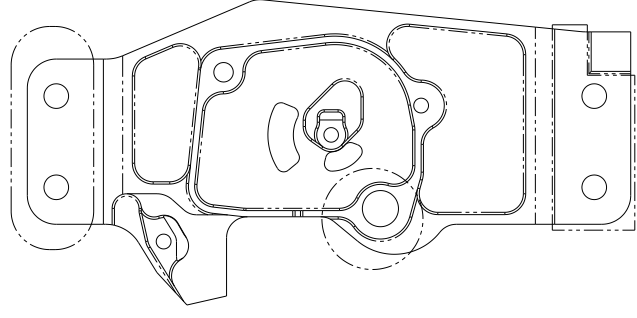

Repair (including filing, deburring and buffing) is prohibited on all surfaces shown inside lines. Alterations of these surfaces may cause inadvertent load release.

Figure 9.2.1


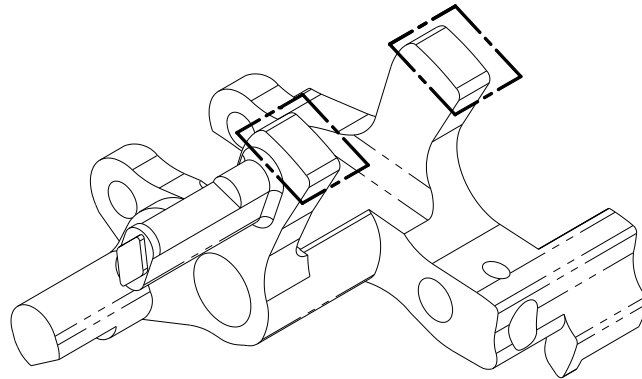


Figure 9.2.2

Pass




Fail

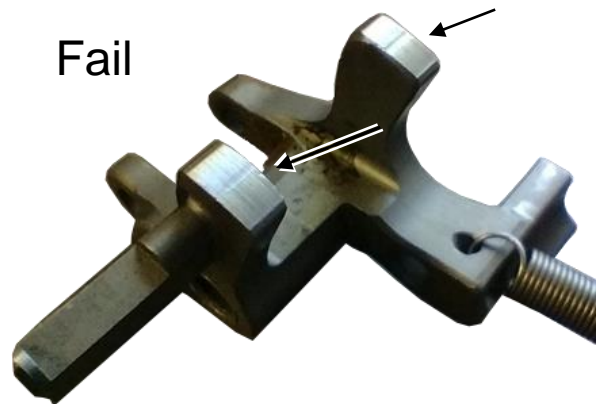


Continued on next page.

Figure 9.2.3

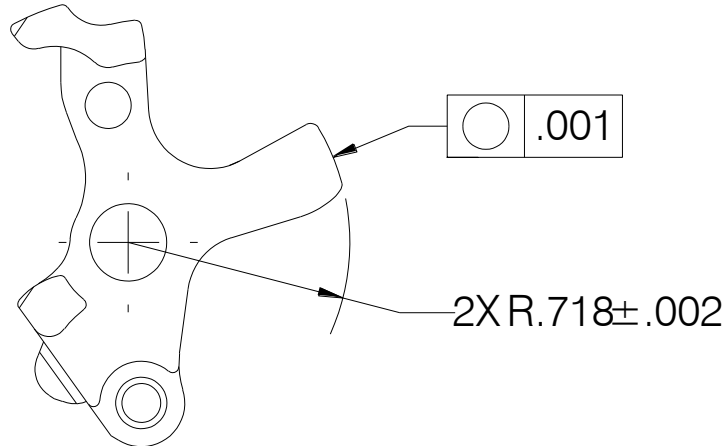


Inspection Criteria and Limits

Inside lines, see figure 9.2.1, gently clean surface by hand using Scotch-Brite (MFG: 3M, MFG P/N: 7447).
Visually inspect surface. No dents, corrosion, gouges, or nicks may remain after cleaning, see figure 9.2.2.
If the cam passes visual inspection, dimensionally inspect per figure 9.2.3.

	Component Maintenance Manual	Document Number 122-036-00	Revision 1
		Date 01/03/23	Page 15 of 24

Re-assembly Instructions

- 9.4 Replace all parts found to be unserviceable or beyond limits.
- 9.5 Apply wet zinc chromate primer (TTP-1757B or equivalent) to threads and install threaded inserts (7.3) into Side Plate (7.1). Break and remove tangs.
- 9.6 Apply wet zinc chromate primer to outside diameters and install DU bearings (6.2, 7.2) into Side Plates (6.1, 7.1) using arbor press. Install flush to inside of Side Plates.
- 9.7 Install roll pins (6.3, 7.4) into Side Plates (6.1, 7.1) using arbor press.
- 9.8 Assemble Toggle (3): Press two DU bearings (3.4) into load beam roller (3.3) with wet zinc chromate primer using an arbor press. Press two DU bearings (3.4) into Toggle (3.1) pivot with wet zinc chromate primer using an arbor press. Press roller bearing (3.2) into toggle using an arbor press. Capture load beam roller in toggle using pin (3.5). Ensure pin is installed as shown. Secure pin with cotter pin (3.6).

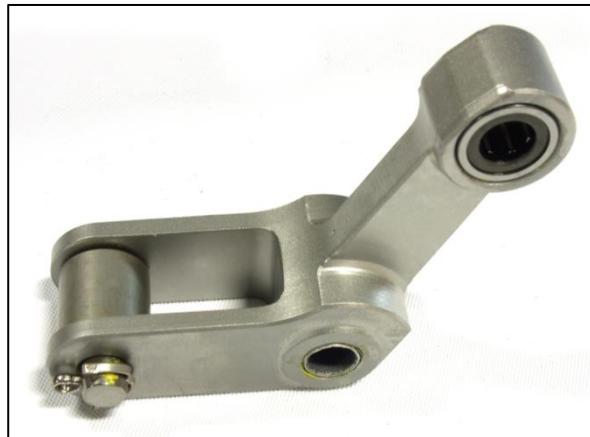


- 9.9 If disassembled, reassemble Cam (2). Press two DU bearings (2.3) into roller (2.2) with wet zinc chromate primer using an arbor press. Press two DU bearings (2.4) into Cam (2.1) pivot with wet zinc chromate primer using an arbor press. Capture roller with pin (2.5) and secure with cotter pin (2.6) as shown. Attach spring (2.7) to Cam.



9.10 Apply Loctite 262 to screw (5.4) threads and install Solenoid Cam (5.3) onto solenoid (5.2) with the three screws (5.4). Safety wire the three screws as shown below. Place the solenoid into the Solenoid Cover (5.1).

9.11 Secure the connector (5.7) to the Solenoid Cover using o-ring and nut included with the connector.

If the solenoid, diode (5.8), and connector were disassembled, solder the solenoid wires to connector pins A and B and then solder the diode across these pins prior to installing in Solenoid Cover. Safety wire the connector nut to the adjacent tab on the Solenoid Cover.

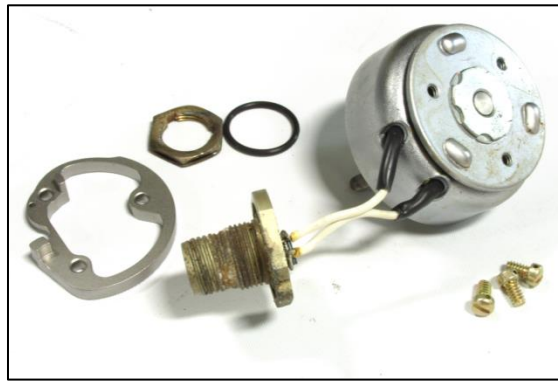

9.12 Apply Loctite 598 RTV silicone to solenoid mounting studs and place S/N Tag (5.6) over mounting studs and secure with nuts (5.5). Torque nuts to 20-25 inch-pounds plus drag torque.

9.13 Install bolt (9) through Side Plate (6.1).

9.14 Install Cam Assembly (2) over bolt (9) in Side Plate (6.1). Slip end of spring (2.7) over roll pin (6.3).

9.15 Rotate Cam clockwise and set Load Beam Assembly (1) into position on Side Plate (6.1).

9.16 Position Toggle Assembly (3) on Side Plate (6.1), grease Cam Roller Pin (8) and insert into the Toggle roller bearing.

9.17 Install bumper (26).


9.18 Check for and remove FOD.

9.19 Align Side Plate (7.1) over the assembly and mate it up to the other Side Plate.


9.20 Set the Solenoid Assembly (5.1) into position and insert the bolts (10, 21) through it and the Side Plates. Insert the bolt (10) from the manual release side, the Toggle may need to be aligned for insertion of the bolt (10) through its pivot. Loosely thread on nuts to retain bolts.

9.21 Install Armor Plates (12, 13) with bolt (22) and nut (16). Use a corrosion inhibiting compound between Armor Plates and Side Plates. Torque nut (16) to 20-25 in-lbs plus drag torque.

9.22 Check for and remove FOD.

	Component Maintenance Manual	Document Number 122-036-00	Revision 1
		Date 01/03/23	Page 17 of 24

- 9.23 Apply grease (MIL-PRF-23827) to the bottom of the Side Plate (7.1) pocket where the spring (27) will rest and install spring into Side Plate, hooking the 90° hook end over the roll pin and the other over the Cam post.
- 9.24 Apply wet zinc chromate primer to its outside diameter and install DU bearing (4.2) into Manual Release Lever (4.1).
- 9.25 Install Manual Release Lever Assembly (4) over the bolt (9) and Side Plate boss.
- 9.26 Assemble the second spring (27) over the Manual Release Lever, connecting the 90° hook end over the same roll pin as the first spring and the other end in the slot under the ear on the Manual Release Lever.
- 9.27 Secure the Manual Release Lever in position with washer (24) and nut (14). Tighten nut finger tight and rotate to nearest castellation to insert cotter pin (18). Ensure Manual Release Lever pivots without binding.
- 9.28 Install washers (15) and (19) and nuts (16) and (20). Torque nut (20) to 15 inch-pounds then align hole with next castellation and install cotter pin (17). Torque nut (16) to 20-25 inch-pounds.
- 9.29 Install Manual Release Cover (11) with two screws (23).
- 9.30 Apply Rigging Warning Decal (28) onto bottom of Solenoid Cover.
- 9.31 If applicable, complete and install Overhaul Label 215-260-00.
- 9.32 Perform the acceptance test procedure per this manual.

	Component Maintenance Manual	Document Number 122-036-00	Revision 1
		Date 01/03/23	Page 18 of 24


10.0 Acceptance Test Procedure

- 10.1 When overhaul or major repair is performed (major repair is defined as separation of the Cargo Hook side plates (6.1 and 7.1)) the Cargo Hook must be subjected to the following acceptance test procedure (ATP) before being returned to service. Optionally use the Onboard Systems factory acceptance test procedure 180-264-00.
- 10.2 Examine the cargo hook externally for security of the lock wire, cotter pins and fasteners.
- 10.3 Use an appropriate insulation resistance tester to test the resistance between each pin and the base of the connector (5.8). The readings should not be less than 2 mega-ohms.
- 10.4 Using a multi-meter, check the resistance between pins A and B of the electrical connector. Resistance should be 3 to 4 ohms.
- 10.5 Remove the Manual Release Cover (11) and screws (23) and install a manual release test cable. Replace the manual release cover and screws.
- 10.6 Suspend the hook from a test rig capable of loading the cargo hook to 7,500 pounds (3,402 kg). Use a steel ring to apply the load to the load beam.
- 10.7 Connect an adjustable 22 – 28 VDC supply with a momentary release switch wired into the positive wire, to the connector (5.7), and an in-line current meter. Connect the negative lead to pin A and the positive lead to pin B. Set the voltage to 22.0 ± 0.1 VDC.
- 10.8 With no load on the load beam, operate the manual release lever. The load beam should fall open and stay in the open position. Push the load beam up and closed. The load beam should automatically latch and the hook lock indicator should align with the line on the manual release cover. Repeat step.
- 10.9 With no load on the load beam, release the cargo hook with the electrical release. The load beam should fall open and stay in the open position. Push the load beam up and closed. The load beam should automatically latch and the hook lock indicator should align with the line on the manual release cover. Repeat step.

CAUTION

Damage to the cargo hook solenoid can occur if the release switch is operated for more than 20 seconds continuously.

- 10.10 Load a suitable load ring onto the load beam (1.1) and push up load beam until it latches. Gradually proof load the cargo hook with the test rig to 7,500 pounds (3,402 kg). Hold the load for 1 minute. The load beam should hold the load without unlatching. Reduce the load to zero.

	Component Maintenance Manual	Document Number 122-036-00	Revision 1
		Date 01/03/23	Page 19 of 24

CAUTION


Do not release the proof test load electrically or manually. Decrease the load gradually, using the test machine, after completion of the proof load test.

- 10.11 Load the cargo hook using a steel ring that is free to drop clear of the load beam. Gradually load the cargo hook to 3,000 pounds (1,360 kg). Using a spring scale or equivalent, pull the manual release cable. The load beam should unlatch and the nylon sling or the steel ring should slide off the load beam. Verify the required release force is between 3.5 pounds (1.58 KG) and 8 pounds (3.62 KG). Repeat the test at 2000 pounds (907 KG), and 600 pounds (272 KG).

CAUTION

Use of a nylon sling is not recommended for load release tests as recoil may cause damage to the cargo hook.

- 10.12 Set the voltage to 20 VDC. Load the cargo hook a steel ring that is free to drop clear of the load beam. Gradually load the cargo hook to 3,000 pounds (1,360 kg). Press the electrical release button. The load beam should unlatch and the steel ring should slide off the load beam. Verify that the current draw is between 5 and 9 amps. Repeat the test at 2000 pounds (907 KG), and 600 pounds (272 KG).
- 10.13 Remove the Cargo Hook from the test stand. Remove the manual release cable and replace the Manual Release Cover (11) and screws (23).

	Component Maintenance Manual	Document Number 122-036-00	Revision 1
		Date 01/03/23	Page 20 of 24


11.0 Troubleshooting

11.1 The following section lists symptoms and probable causes to aid in equipment troubleshooting.

Symptom	Probable Cause	Remedy
Failure to operate electrically.	Damaged or defective diode (5.8) or solenoid (5.2).	Check for proper resistance across connector pins A and B per section 11.4. If out of tolerance, remove the Solenoid Assembly (5) and disconnect the diode (5.8). Re-check for proper resistance. Replace diode or solenoid (5.2) as necessary.
	Damaged or loose wiring.	Check for proper continuity across connector pins A and B per Table 9.1. Remove the Solenoid Assembly (5) and repair wiring.
During the Acceptance Test Procedure, the manual release cable force exceeds requirements.	Friction in internal mechanism.	Check operation of unit using the manual release lever. Disassemble and inspect internal mechanism. Check all bearing joints for free movement. Check Cam (2.1) for denting/ damage. Check toggle roller and pin for denting/ damage. Replace as necessary.

12.0 Illustrated Parts List

Figure 13.1, Cargo Hook Parts

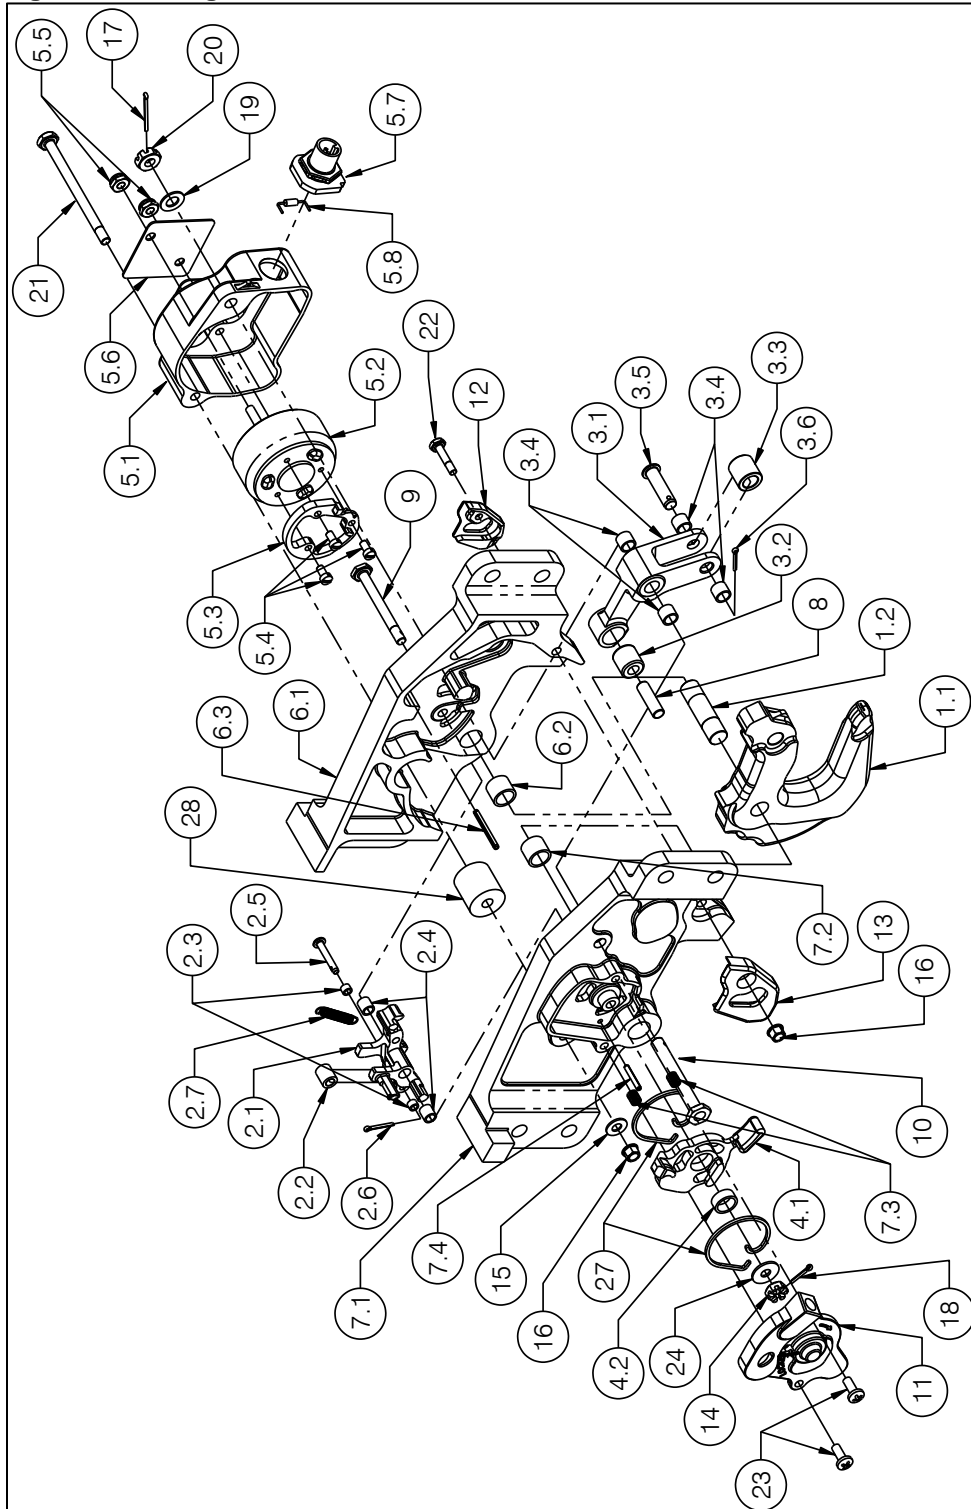


	Component Maintenance Manual	Document Number 122-036-00	Revision 1
		Date 01/03/23	Page 22 of 24

Table 13.1, Cargo Hook Parts

Item	Part No.	Description	Quantity 528-049-00	Quantity 528-049-01	Qty in O/H Kit 212-032-00
1♦	232-850-00	Load Beam Assembly	1	1	-
1.1	292-092-00	Load Beam	1	1	-
1.2	290-640-00	Load Beam Shaft	1	1	-
2♦	232-162-00	Cam Assembly	1	1	1
2.1	290-832-00	Cam	1	1	-
2.2	290-603-00	Roller	1	1	-
2.3	517-031-00	DU Bearing	2	2	-
2.4	517-009-00	DU Bearing	2	2	-
2.5	510-495-00	Pin	1	1	-
2.6	510-417-00	Cotter Pin	1	1	-
2.7	514-032-00	Spring	1	1	-
3♦	232-185-00	Toggle Assembly	1	1	-
3.1	290-838-00	Toggle	1	1	-
3.2	517-060-00	Bearing	1	1	1
3.3	290-438-00	Roller	1	1	-
3.4	517-021-00	DU Bearing	4	4	4
3.5	510-494-00	Pin	1	1	1
3.6	510-417-00	Cotter Pin	1	1	1
4♦	232-849-00	Manual Release Lever Assembly	1	1	-
4.1	292-090-00	Manual Release Lever	1	1	-
4.2	517-054-00	DU Bearing	1	1	1
5♦	232-848-00	Solenoid Assembly	1	-	-
	232-868-00	Solenoid Assembly	-	1	-
5.1	292-093-00	Solenoid Cover	1	1	-
5.2	455-003-00	Solenoid	1	1	-
5.3	290-835-00	Solenoid Cam	1	1	-
5.4	510-379-00	Screw	3	3	3
5.5	510-206-00	Nut	2	2	2
5.6	215-415-00	S/N Plate	1	-	-
	215-429-00	S/N Plate	-	1	-
5.7	410-139-00	Connector	1	1	-
5.7.1	556-045-00	O-Ring	-	-	1
5.8	340-035-00	Diode	1	1	-
6♦	232-852-00	Side Plate Assembly, Solenoid	1	1	-
6.1	292-088-00	Side Plate, Solenoid	1	1	-
6.2	517-010-00	DU Bearing	1	1	1
6.3	510-202-00	Roll Pin	1	1	1



Component Maintenance Manual

Document Number
122-036-00

Revision
1


Date
01/03/23

Page
23 of 24

Item	Part No.	Description	Quantity 528-049-00	Quantity 528-049-01	Qty in O/H Kit 212-032-00
7♦	232-851-00	Side Plate Assembly, Manual	1	1	-
7.1	292-087-00	Side Plate, Manual	1	1	-
7.2	517-010-00	DU Bearing	1	1	1
7.3	510-210-00	Helicoil	2	2	2
7.4	510-203-00	Roll Pin	1	1	1
8	290-896-00	Cam Roller	1	1	-
9	290-901-00	Bolt	1	1	1
10	290-913-00	Bolt	1	1	1
11	292-091-00	Manual Release Cover	1	1	-
12	291-643-00	Armor Plate, Solenoid Side	1	1	-
13	291-644-00	Armor Plate, Manual Side	1	1	-
14	510-082-00	Nut	1	1	-
15	510-095-00	Washer	1	1	-
16	510-102-00	Nut	2	2	2
17	510-115-00	Cotter Pin	1	1	1
18	510-125-00	Cotter Pin	1	1	1
19	510-219-00	Washer	1	1	1
20	510-259-00	Nut	1	1	1
21	510-375-00	Bolt	1	1	1
22	510-376-00	Bolt	1	1	1
23	510-493-00	Screw	3	3	3
24	510-516-00	Washer	1	1	1
25	510-755-00	Screw	1	1	1
26	514-031-00	Bumper	1	1	1
27	514-058-00	Torsion Spring	2	2	2
28*	215-240-00	Rigging Warning Label	1	1	1
29*	215-260-00	Overhaul Label	-	-	1

♦ Item not illustrated as an assembly.

* Item not shown.

	Component Maintenance Manual	Document Number 122-036-00	Revision 1
		Date 01/03/23	Page 24 of 24

13.0 Instructions for Returning Equipment to the Factory

- 13.1 If an Onboard Systems product must be returned to the factory for any reason (including returns, service, repairs, overhaul, etc.) obtain an RMA number before shipping your return.



An RMA number is required for all equipment returns.

- To obtain an RMA, please use one of the listed methods.
 - Contact Technical Support by phone or e-mail (Techhelp@OnboardSystems.com).
 - Generate an RMA number at our website: <http://www.onboardsystems.com/rma.php>
- After you have obtained the RMA number, please be sure to:
 - Package the component carefully to ensure safe transit.
 - Write the RMA number on the outside of the box or on the mailing label.
 - Include the RMA number and reason for the return on your purchase or work order.
 - Include your name, address, phone and fax number and email (as applicable).
 - Return the components freight, cartage, insurance and customs prepaid to:
Onboard Systems International, LLC
13915 NW 3rd Court
Vancouver, Washington 98685
USA
Phone: 360-546-3072